



## Motorola MXv4

### Set Up Process

- Press the TV key.
- Press and hold SET UP until the TV key blinks twice. Please note that if you have the MXv3, which is almost identical to the MXv4, the SET UP button is called LEARN.
- Enter the first TV code for your TV brand from the list below.
- Press the power button to test TV control. If the TV turns off, set up is complete.
- If the TV does not turn off, repeat the process using the next code for your TV brand.

### Most Common Codes

**Dynex** 1463, 1785, 1810, 2049, 2184

**Emerson** 1864, 0154, 0451, 0236, 0463, 0180, 0178, 0171, 1661, 0623, 1394, 1665, 1886, 1944, 1963, 1997

**Insignia** 1423, 1564, 0463, 0171, 2751, 2432, 2184, 2088, 2049, 2002, 1963, 1892, 1810, 1785, 1660, 1641, 1517, 1385, 1326, 1204

**LG** 1423, 1447, 0017, 1265, 0178, 0030, 2834, 2731, 2424, 2359, 2358, 2182, 1993, 1860, 1859, 1768, 1721, 1325, 1178, 0856, 0056

**Mitsubishi** 1250, 0093, 0150, 0178, 0836, 1797

**Panasonic** 1480, 0250, 0051, 0650, 1271, 1291, 1345, 1924, 1927, 1941, 1946, 1947, 2240, 2264

**Philips** 1454, 1866, 0054, 0171, 0037, 0690, 1394, 1455, 1483, 1744, 1806, 1867, 1961, 2372, 2374, 2564

**RCA** 1547, 1447, 0047, 0051, 0093, 0060, 1661, 2932, 2746, 2434, 2247, 2187, 2002, 1959, 1958, 1953, 1922, 1781, 1347, 1147, 0679

**Samsung** 0812, 0060, 0702, 0178, 0030, 2814, 2697, 2596, 2137, 2103, 2051, 1959, 1060, 0814, 0766, 0650, 0056, 0037

**Sanyo** 0054, 0154, 1142, 1362

**Sharp** 0818, 0093, 1459, 1602, 1659, 2360, 2402, 2495

**Sony** 0810, 0000, 1685, 1825, 1904, 1925, 2736

**Toshiba** 1524, 0154, 0156, 1256, 0093, 1265, 0060, 2724, 2006, 1959, 1945, 1936, 1935, 1743, 1704, 1656, 1356, 1343, 1325, 1156, 0822, 0650

**Vizio** 1758, 0864, 0885, 1756, 2512, 2757

**Westinghouse** 1712, 0451, 0885, 0889, 0890, 1217, 1282, 1300, 1577, 2195, 2293, 2499

**Zenith** 0000, 1423, 0047, 0017, 0463, 1265, 0178, 0030, 1145, 0145, 0092, 1661, 1325, 1365, 0037, 1721, 1859, 1904, 2358