



Motorola URC62440

Set Up Process

- Press the TV key.
- Press and hold SET UP until the TV key blinks twice.
- Enter the first TV code for your TV brand from the list below.
- Press the power button to test TV control. If the TV turns off, set up is complete.
- If the TV does not turn off, repeat the process using the next code for your TV brand.

Most Common Codes

Dynex 1463, 1785, 1810, 2049, 2184

Emerson 1864, 0154, 0451, 0236, 0463, 0180, 0178, 0171, 1661, 0623, 1394, 1665, 1886, 1944, 1963, 1997

Insignia 1423, 1564, 0463, 0171, 2751, 2432, 2184, 2088, 2049, 2002, 1963, 1892, 1810, 1785, 1660, 1641, 1517, 1385, 1326, 1204

LG 1423, 1447, 0017, 1265, 0178, 0030, 2834, 2731, 2424, 2359, 2358, 2182, 1993, 1860, 1859, 1768, 1721, 1325, 1178, 0856, 0056

Mitsubishi 1250, 0093, 0150, 0178, 0836, 1797

Panasonic 1480, 0250, 0051, 0650, 1271, 1291, 1345, 1924, 1927, 1941, 1946, 1947, 2240, 2264

Philips 1454, 1866, 0054, 0171, 0037, 0690, 1394, 1455, 1483, 1744, 1806, 1867, 1961, 2372, 2374, 2564

RCA 1547, 1447, 0047, 0051, 0093, 0060, 1661, 2932, 2746, 2434, 2247, 2187, 2002, 1959, 1958, 1953, 1922, 1781, 1347, 1147, 0679

Samsung 0812, 0060, 0702, 0178, 0030, 2814, 2697, 2596, 2137, 2103, 2051, 1959, 1060, 0814, 0766, 0650, 0056, 0037

Sanyo 0054, 0154, 1142, 1362

Sharp 0818, 0093, 1459, 1602, 1659, 2360, 2402, 2495

Sony 0810, 0000, 1685, 1825, 1904, 1925, 2736

Toshiba 1524, 0154, 0156, 1256, 0093, 1265, 0060, 2724, 2006, 1959, 1945, 1936, 1935, 1743, 1704, 1656, 1356, 1343, 1325, 1156, 0822, 0650

Vizio 1758, 0864, 0885, 1756, 2512, 2757

Westinghouse 1712, 0451, 0885, 0889, 0890, 1217, 1282, 1300, 1577, 2195, 2293, 2499

Zenith 0000, 1423, 0047, 0017, 0463, 1265, 0178, 0030, 1145, 0145, 0092, 1661, 1325, 1365, 0037, 1721, 1859, 1904, 2358