



Cisco AT6400

Set Up Process

- Ensure that your TV is on.
- Press the TV key and then press and hold the OK key.
- Release both keys and the TV key will blink twice.
- Enter the first TV code for your TV brand from the list below. The TV key will blink three times to indicate that the code entry was accepted.
- Press the power button to test TV control. If the TV turns off, set up is complete.
- If the TV does not turn off, repeat the process using the next code for your TV brand.

Most Common Codes

Emerson 1004, 1011, 1013, 1025, 1028, 1031, 1033, 1036, 1044, 1045, 1080, 1097, 1101, 1102, 1107, 1382, 1383

Hitachi 1004, 1011, 1012, 1051, 1052, 1084, 1085, 1086, 1087, 1102, 1225, 1384

LG 1005, 1396, 1397, 1398, 1399, 1402, 1403, 1404, 1405

Mitsubishi 1004, 1005, 1018, 1021, 1047, 1061, 1062, 1081, 1381

Panasonic 1003, 1010, 1049, 1053, 1096, 1123, 1152, 1231, 1289, 1292, 1295, 1303, 1304, 1305, 1306, 1385

Philips 1003, 1004, 1007, 1011, 1017, 1018, 1053, 1056, 1057, 1059, 1060, 1063, 1110, 1126, 1129, 1148, 1155, 1238, 1263, 1264, 1265, 1290, 1291, 1307, 1308, 1309, 1337, 1389

RCA 1143, 1196, 1241, 1242

Samsung 1019, 1171, 1172, 1173, 1174, 1175, 1197, 1198, 1199, 1200, 1245, 1246, 1325, 1327, 1352, 1354, 1443

Sharp 1138, 1176, 1177, 1214, 1244, 1247, 1248, 1348, 1350, 1415, 1416

Sony 1037, 1128, 1137, 1178, 1215, 1216, 1218, 1219, 1220, 1221, 1250, 1251, 1316, 1318, 1330, 1347, 1413

Toshiba 1127, 1179, 1203, 1204, 1222, 1223, 1332, 1340, 1341, 1345, 1353

Westinghouse 1454

HDTV

Hitachi 1030, 1132, 1133, 1134, 1191, 1208, 1209, 1210, 1211, 1212, 1226, 1322, 1324, 1328, 1344, 1447

Insignia 1437

Magnavox 1329, 1358, 1372, 1414

Mitsubishi 1032, 1213, 1229, 1230, 1448

Panasonic 1140, 1169, 1170, 1194, 1233, 1234, 1331, 1336, 1410, 1417, 1442, 1466

Samsung 1019, 1171, 1172, 1173, 1174, 1175, 1197, 1198, 1199, 1200, 1245, 1246, 1325, 1327, 1352, 1354, 1443

Sharp 1138, 1176, 1177, 1214, 1244, 1247, 1248, 1348, 1350, 1415, 1416

Sony 1037, 1128, 1137, 1178, 1215, 1216, 1218, 1219, 1220, 1221, 1250, 1251, 1316, 1318, 1330, 1347, 1413

Toshiba 1127, 1179, 1203, 1204, 1222, 1223, 1332, 1340, 1341, 1345, 1353

Vizio 1429, 1433, 1439

Westinghouse 1454

Zenith 1020, 1139, 1207, 1253, 1255, 1333, 1342, 1349